


How to connect PTZ dome camera to GV-Series?

Step1:

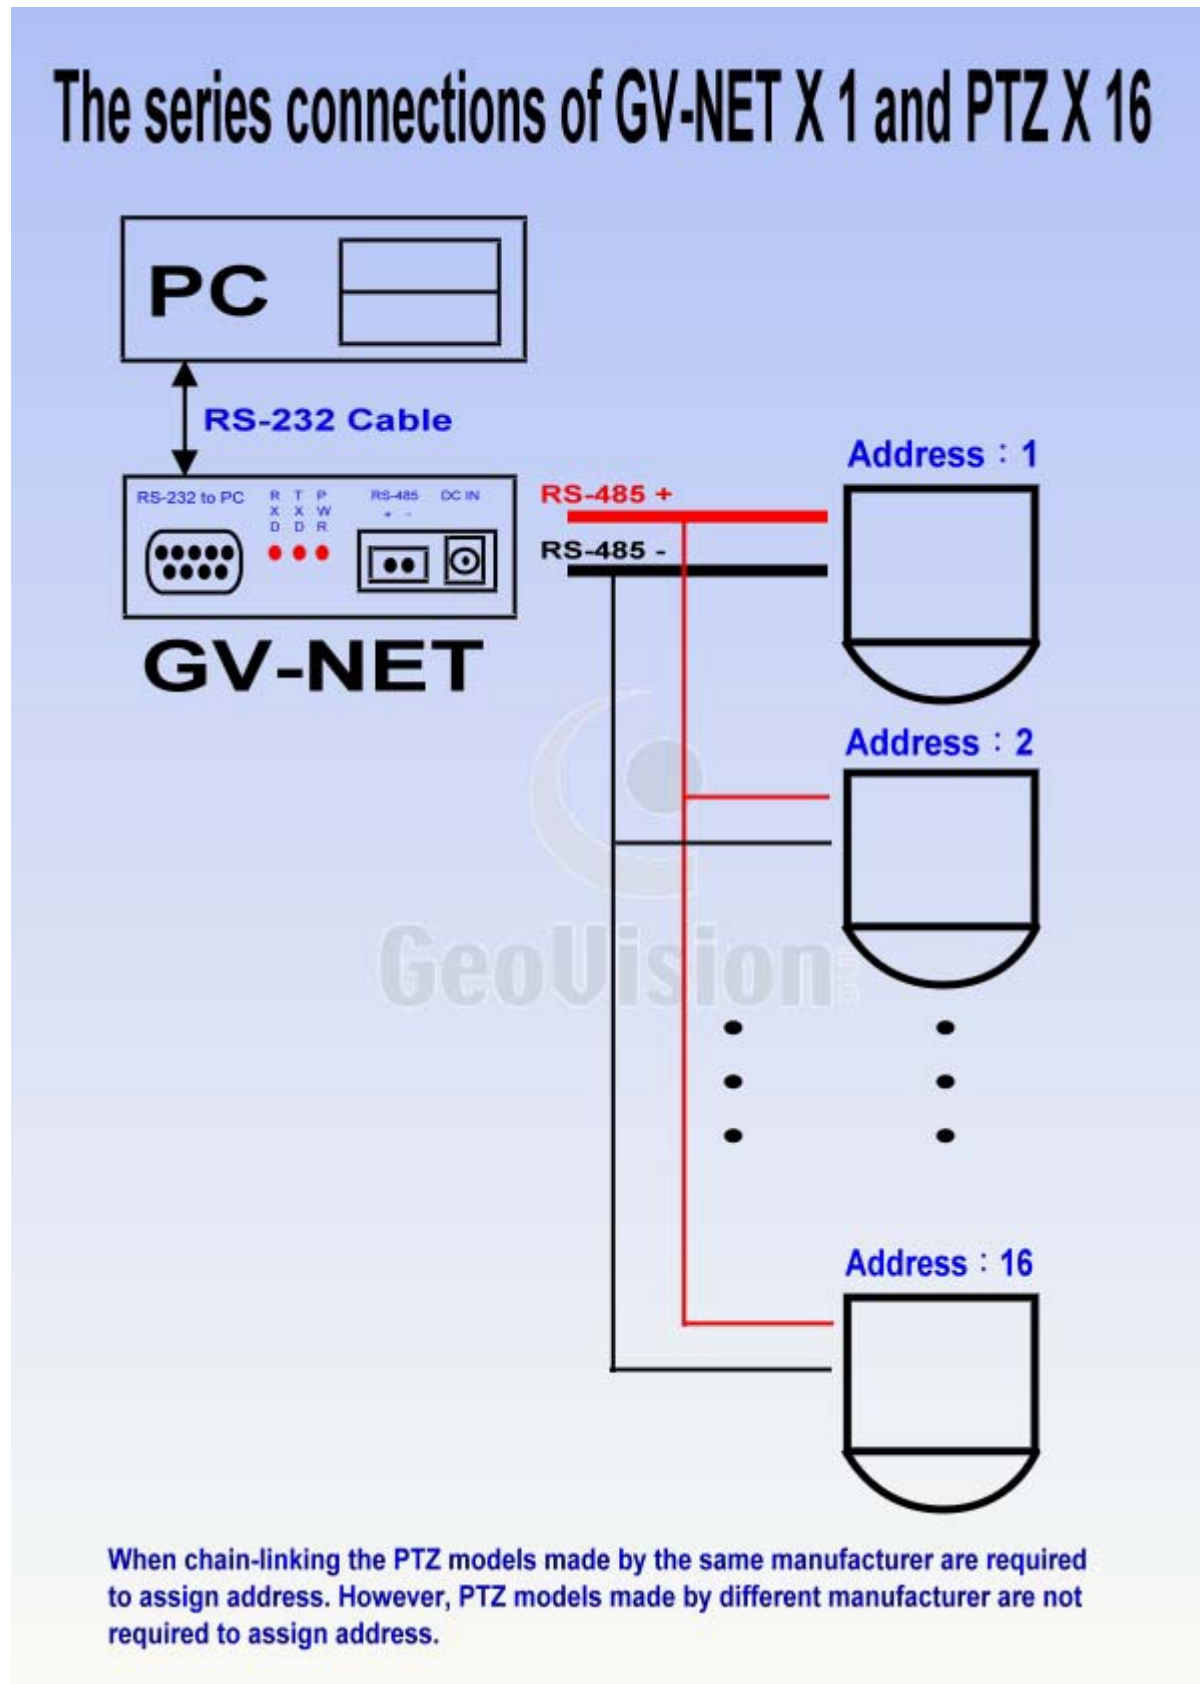

**Step 2:** Select PTZ dome device by using [PT Speed] drop down menu, then click activate option. If you have more than one PTZ dome installed, then each dome should be activated individually.



**Step 3:** Start PTZ control panel and use the [Addr:] drop down menu to select different PTZ dome you wish to control.

